




TEMPERATURE CONTROLLERS... PORTABLE CHILLERS... CENTRAL CHILLERS... PUMP TANK STATIONS... TOWER SYSTEMS...

**SUBJECT: AQUAVAR CPC PUMP VARIABLE SPEED DRIVE
INSTRUCTIONS TO SETUP TWO OR MORE COMMUNICATING DRIVES**

FYI #316 05/02/2014

Step 1

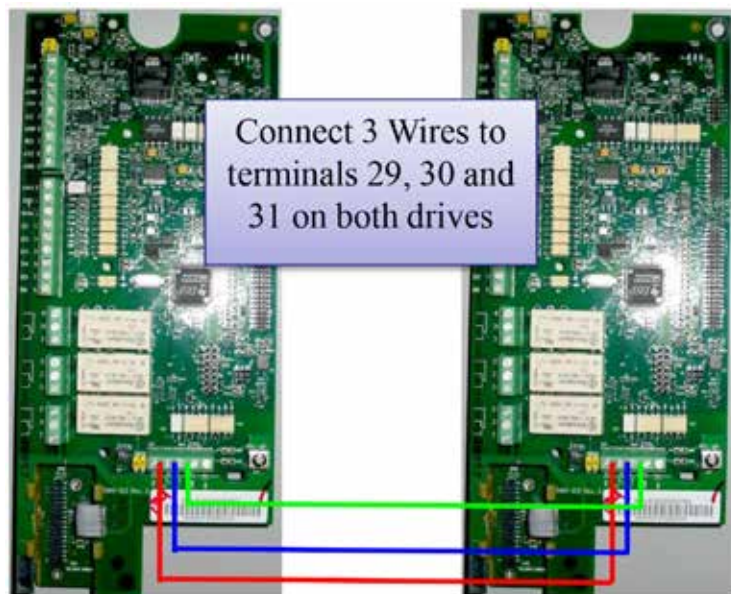

Recommended 22 AWG shielded cable.

Step 2

On the Keypad of the first drive ... Go to:

- Menu
- Parameters
- Group 11
- Parameter 1102
(Application Macro)
- Change to:
Multicontrol



Step 3

Repeat Step 2 on the second drive.

Step 4

On the second drive, Exit out to Groups :

- Go to Group 22
- Parameter 2207
(Pump Address)
- Change Value to: **2**



Notes:

Repeat Steps 3 & 4 for (up to 2) drives as needed.

These simple instructions are in addition to the basic wiring and programming used for setting up individual drives.

For expanded detail Aquavar CPC setup and capabilities, refer to IM167, Aquavar CPC instruction and operation manual.

Information provided by Xylem. More information can be found at :
<http://documentlibrary.xylemappliedwater.com/wp-content/blogs.dir/22/files/2012/07/IM167R08.pdf>